

### § 3276.13

addition to the information required under paragraph (a) of this section, you must include the following information in your monthly report of facility operations:

(1) Amount of electricity delivered to the sales point in kwh, if the sales point is different from the tailgate of the facility;

(2) Amount of electricity lost to transmission;

(3) A report from the utility purchasing the electricity documenting the total number of kwh delivered to the sales point during the month, or monthly reporting period if it is not a calendar month, and the number of kwh delivered during diurnal and seasonal pricing periods; and

(4) Any other information we may require.

### § 3276.13 What additional information must I give BLM in the monthly report for flash and dry steam facilities?

In addition to the regular monthly report information required by § 3276.12, send to BLM:

(a) Steam flow into the turbine in klbs; for dual flash facilities, you must separate the steam flow into high pressure steam and low pressure steam;

(b) Condenser pressure in psia;

(c) Condenser temperature in deg. F;

(d) Auxiliary steam flow used for gas ejectors, steam seals, pumps, etc., in klbs;

(e) Flow of condensate out of the plant (after the cooling towers) in klbs; and

(f) Any other information we may require.

### § 3276.14 What information must I give BLM in the monthly report for direct use facilities?

(a) Total monthly flow through the facility in thousands of gallons (kgal) or klbs;

(b) Monthly average temperature in, in deg. F;

(c) Number of hours that geothermal heat was used; and

(d) Any other information we may require.

### 43 CFR Ch. II (10–1–14 Edition)

### § 3276.15 How must I notify BLM of accidents occurring at my utilization facility?

You must orally inform us of all accidents that affect operations or create environmental hazards within 24 hours after each accident. When you contact us, we may require you to submit a written report fully describing the incident.

### Subpart 3277—Inspections, Enforcement, and Noncompliance

### § 3277.10 When will BLM inspect my operations?

BLM may inspect all operations to ensure compliance with the requirements of § 3200.4. You must give us access during normal operating hours to inspect all facilities utilizing Federal geothermal resources.

### § 3277.11 What records must I keep available for inspection?

(a) The operator or facility operator must keep all records and information pertaining to the operation of your utilization facility, royalty and production meters, and safety training available for BLM inspection for a period of 6 years following the time the records and information are created.

(b) This requirement also pertains to records and information from meters located off your lease or unit, when BLM needs them to determine:

(1) Resource production to a utilization facility; or

(2) The allocation of resource production to your lease or unit.

(c) Store all of these records in a place where they are conveniently available.

### § 3277.12 What will BLM do if I do not comply with all BLM requirements pertaining to utilization operations?

(a) We will issue you a written Incident of Noncompliance, directing you to take required corrective action within a specific time period. If the noncompliance continues or is serious in nature, BLM will take one or more of the following actions:

(1) Enter the lease, and correct any deficiencies at your expense;